




Change the pads shape:

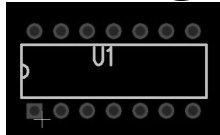



Click left-click mouse on the pad of component.

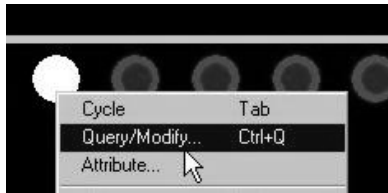

 Click right-click mouse to select [Query/Modify]



Click Pad Stack icon

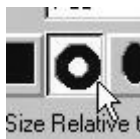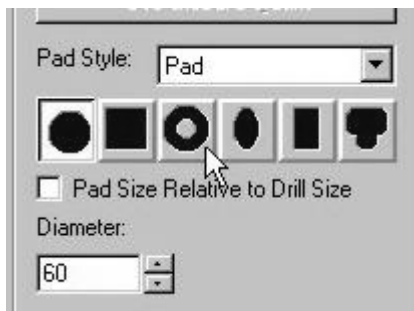


Select the icon pad shape.



Input the size of inner diameter and diameter of pad.



Then select other pin number of component.

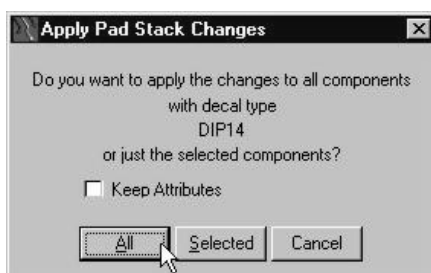

Click OK. Then click All if change all component's pads.